


## Installation instructions (applicable to all bed styles and sizes)


**Step 1:** Use a hammer to firmly set dowels (part 2) into 10mm holes labelled on diagram 1.

**Step 2:** Screw threaded rods (part 1) into receiver labelled on diagram 1.

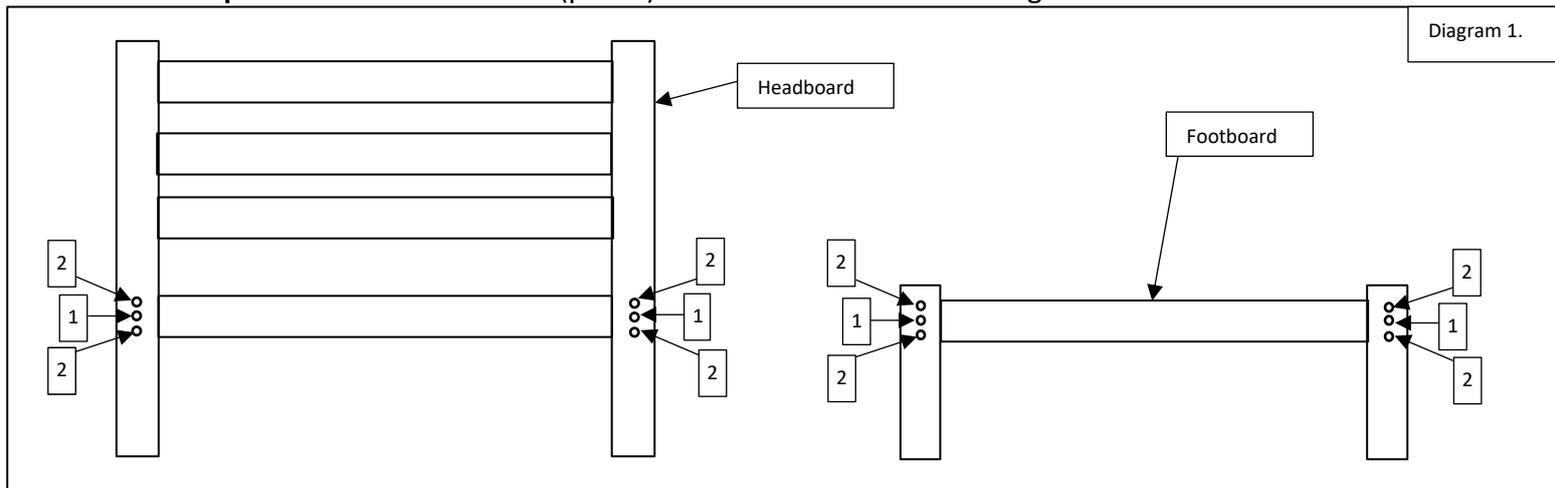


**Step 3:** Adjoin side rails to headboard legs as shown in diagram 2 (leave a 1cm space between side rail and leg).

**Step 4:** Adjoin side rails to the footboard in the same fashion.

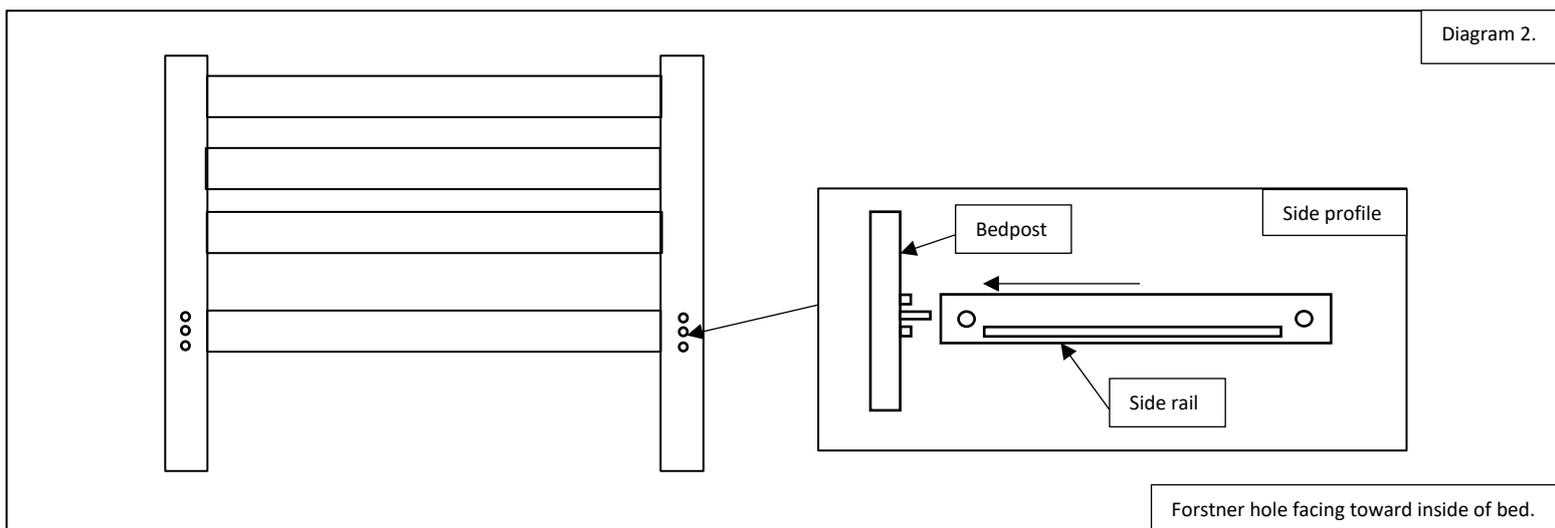

**Step 5:** Slide half-moon spacer (part 3) onto threaded rod (diagram 3).

**Step 6:** Screw hex nut (part 4) onto threaded rod and tighten with spanner (part 7) ensuring not to over-tighten as it may damage the thread (diagram 3).

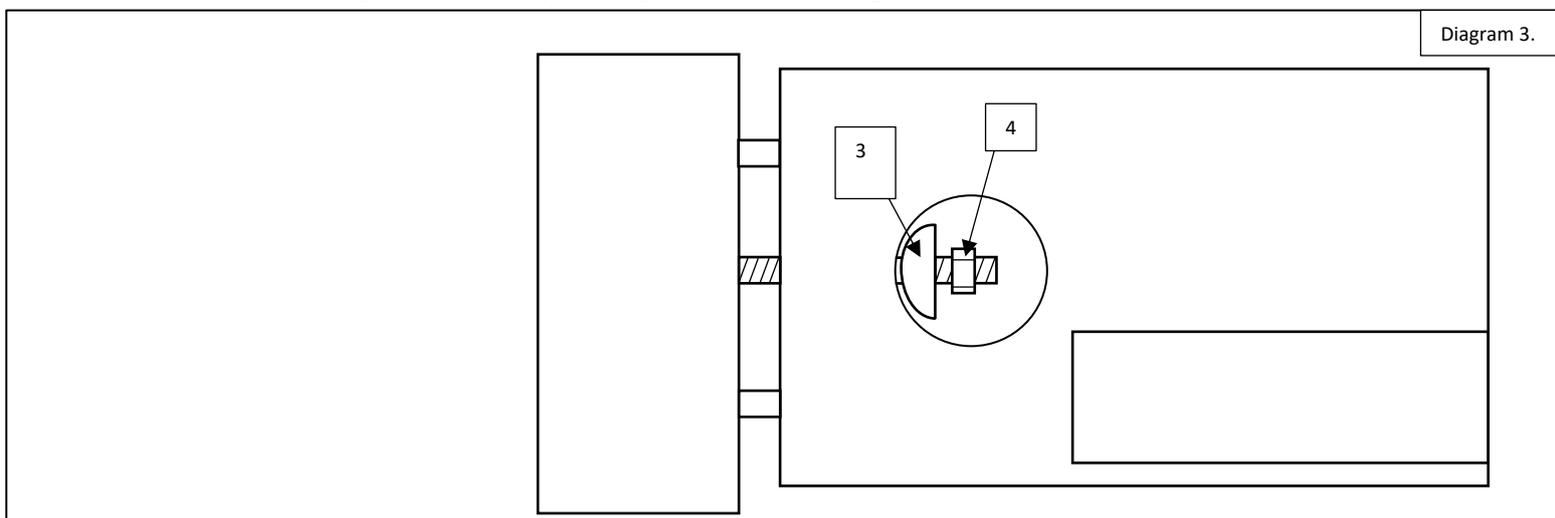

**Step 7:** Place slats between side-rails using the wooden spacers provided (part 5) to ensure the slats are an equal distance apart (diagram 4).

**Step 8:** Fix slats to the bed frame by inserting screws provided (part 6) into the pre-drilled holes and screw in until the screw head sits below the surface of the wood (ensure not to over-tighten the screw as it will damage the slats and reduce their support).

